
STRATA

BASE CABINETS

INSTALLATION GUIDE

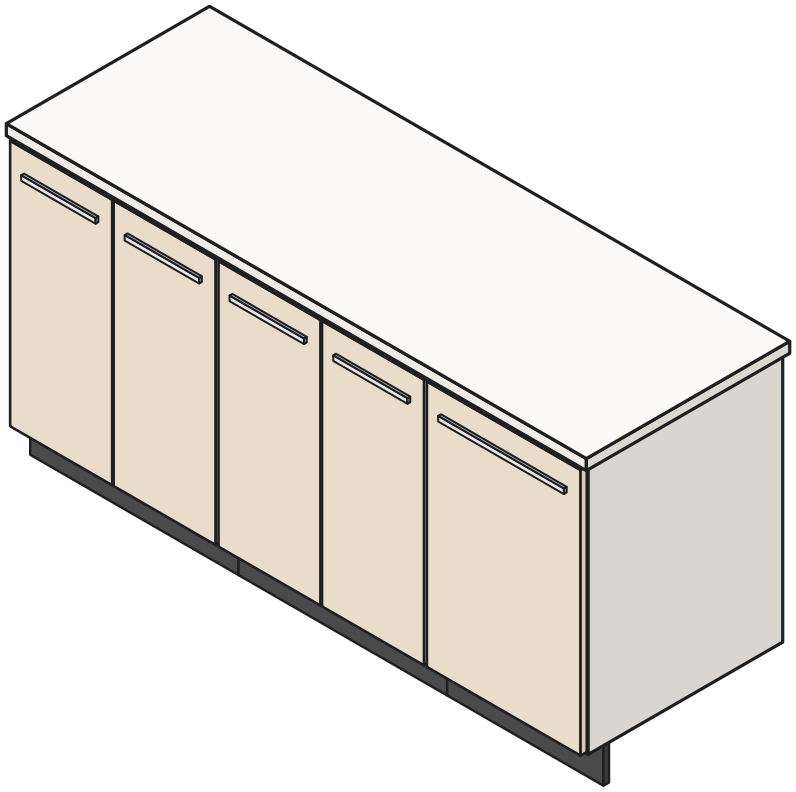


2x

Read the whole guide before you start.

TOOLS


PH2 screwdriver


Level

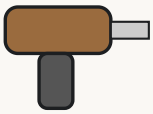
Drill


Clamp


Tape measure



Utility knife



Soft cloth



2 people

PARTS INCLUDED

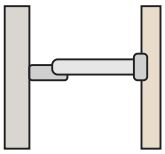
35 mm clip hinge

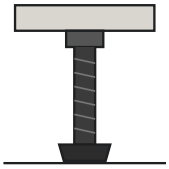
Adjustable leg



Connecting bolt


Toe kick clip


Toe kick


Quantities depend on each module. Check the parts list of your order before you start. If anything is missing, write to ventas@stratamodular.com.

1 UNPACK THE CABINETS

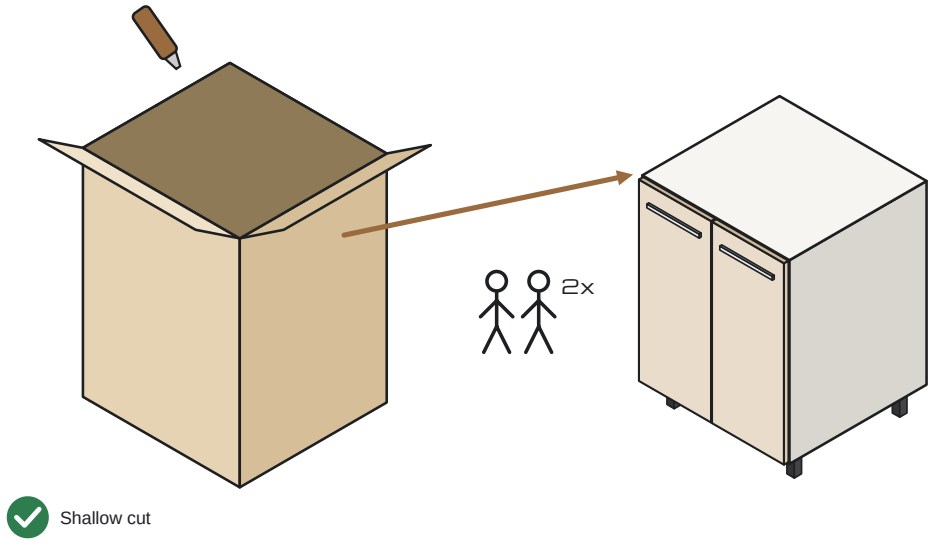


Cut the tape with a shallow cut. Lift the cabinet out with two people and check that all parts are there.

2 ATTACH THE DOORS

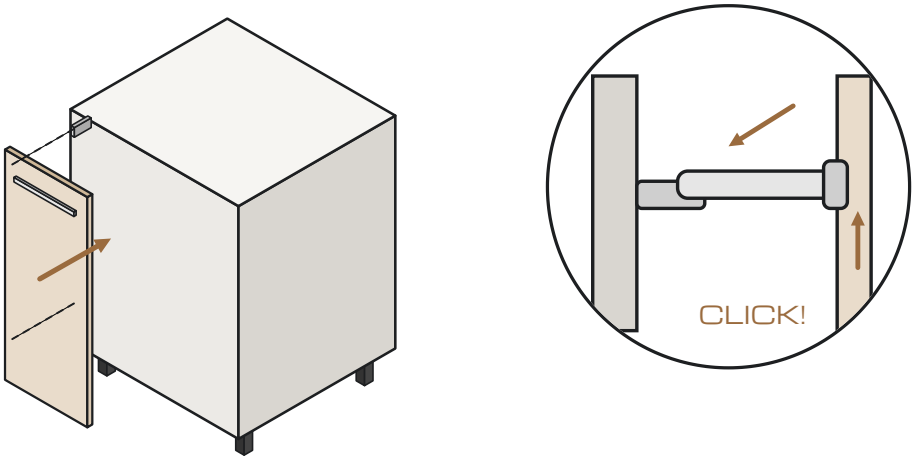


Hook the back of the hinge onto the cabinet plate and press until it clicks.

3 SET IN PLACE

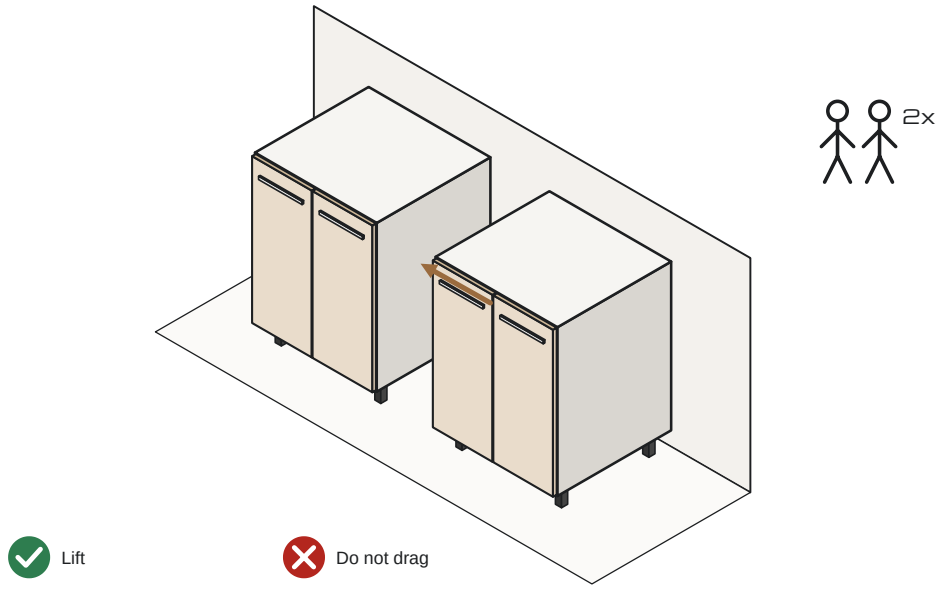


Lift the cabinet into place. Do not drag it on its legs.

4 LEVEL THE CABINET

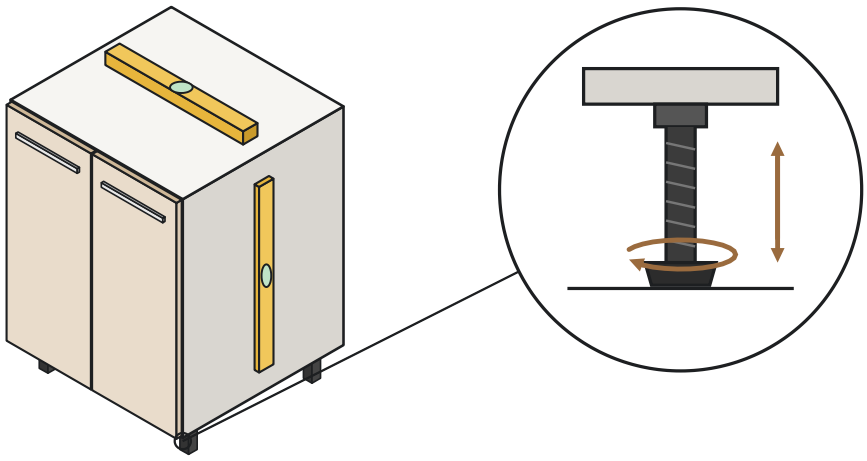


Turn the legs until the top is level and the sides are plumb.

5 JOIN THE CABINETS

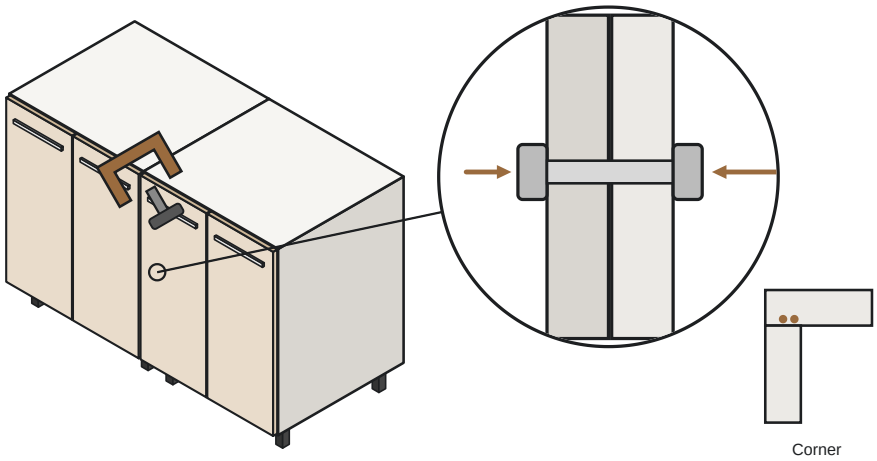


Align the fronts, clamp them and join the sides with the connecting bolts. At a corner, join to the side of the next cabinet.

6 ADJUST HINGES AND DOORS

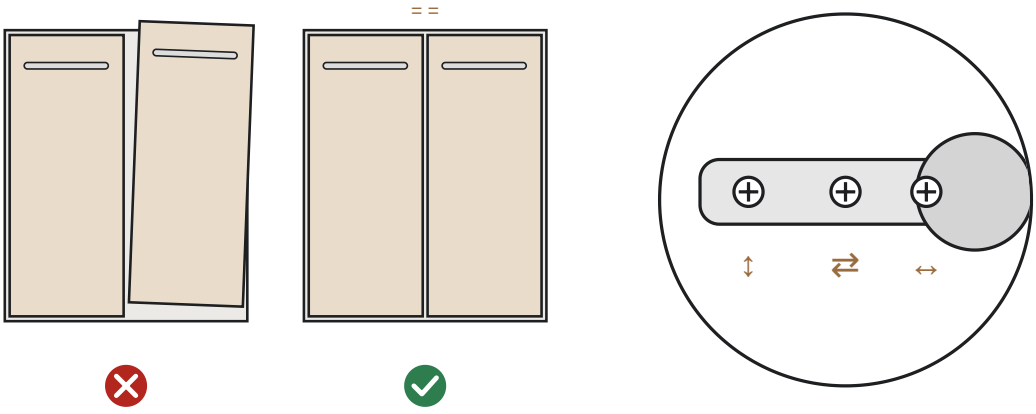


Use the hinge screws to even out the gaps: height, depth and side.

7 FIT THE TOE KICK

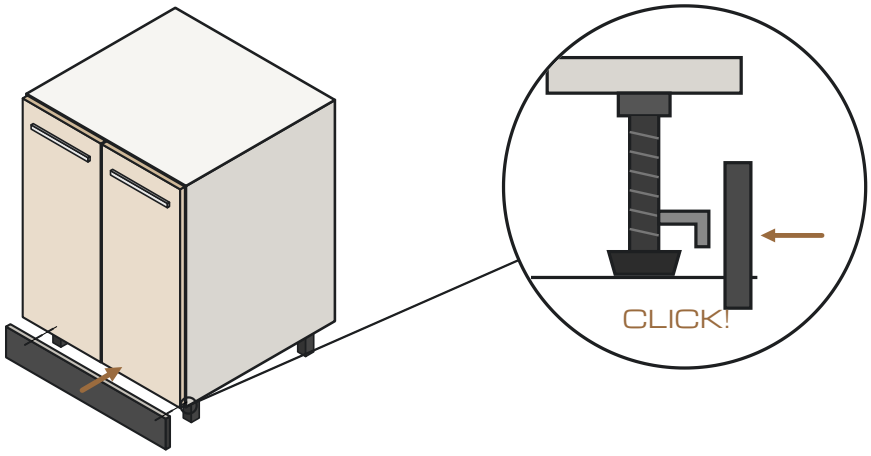

Fit the clips on the legs and press the toe kick on until it snaps in.

8 CLEAN

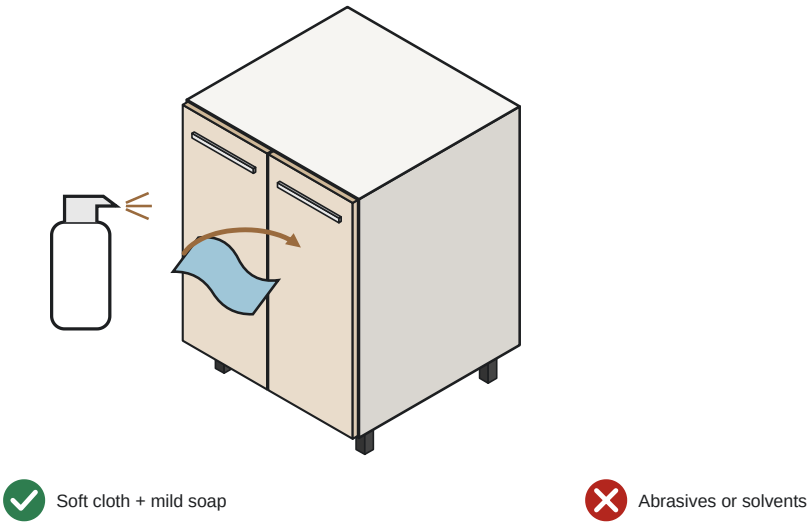

Clean with a soft cloth and mild soap. Do not use abrasives or solvents.